

1 開啓 / 關閉掃描器 - 電源鍵持續按3秒。  
Turn On /Off the scanner, press Trigger & Power key 3 seconds.


2 更新清除和藍牙裝置之間的配對  
- 掃描鍵和電源鍵同時連續按壓3秒鐘。  
Clear the pairing between scanner and bluetooth device -Trigger & Power Key press 3 seconds together.

3 以上步驟是清除原配對，再來進行新配對。  
After clear the old pairing, we can start the new pairing.

### SPP介面設定 SPP interface setting

請按照下列1. 2. 3. 順序條碼讀取完成設定

Please scan as follow as below 1.2.3. barcodes to complete the set.

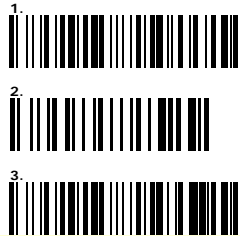

請依您想要的配對方式往下開始進行配對。  
Please follow instructions as below to pair the scanner as your way.

All settings must be done in the scanner and Bluetooth device is NOT paired.  
所有設置必須在掃描器沒有和藍牙裝置連線的情況下才可以完成。

In SPP interface, the beep of GOOD READ sound is controled by paired Bluetooth device. When the barcode data pass to Bluetooth device , the device sends ASCII Code control codes (FF 55 55 80 62 65 65 70 00), the buzzer on the scanner will have a beep sound.

SPP的GOOD READ嗶聲是由主機或手機端控制(由使用者配對的藍牙機器控制)，條碼資料送達主機端後，主機端送出ASCII Code的控制碼 (FF 55 55 80 62 65 65 70 00)，掃描器上的蜂鳴器就會嗶一聲。

### 藍牙斷線後，自動關機？

After Bluetooth Disconnect, turn off scanner

請按照下列1.2.3.順序條碼讀取完成設定

Please scan as follow as below 1.2.3. barcodes to complete the set.



2. ※ NOT Auto-Power OFF 不自動關機



After 10mins, Auto Power-Off  
10分鐘後自動關機



### 快速配對 Auto Authentication

請按照下列1.2.3.順序條碼讀取完成設定

Please scan as follow as below 1.2.3. barcodes to complete the set.



All settings must be done in the scanner and Bluetooth device is NOT paired.

所有設置必須在掃描器沒有和藍牙裝置連線的情況下才可以完成。

### 不快速配對(預設PIN碼0000)

#### Disable Authentication

#### (Default PIN code 0000)

請按照下列1.2.3.4.順序條碼讀取完成設定

Please scan as follow as below 1.2.3.4. barcodes to complete the set.



### 不快速配對，自訂 PIN 碼

#### Customized PIN Code

SPP PIN碼由掃描器設定，藍牙裝置(手機、平板...etc)配合

SPP PIN codes are set by scanner, Bluetooth devices (ex: cellphone, Tablet...etc)cooperate with scanner.

請按照下列1.-6.順序條碼讀取完成設定

Please scan as follow as below 1.-6. barcodes to complete the set.



### SetUp 4 PIN codes 自訂 4位 PIN碼數字



### 清除自訂 PIN 碼設定

恢復成0000

#### Eliminate customized PIN Code back to PIN code 0000

請按照下列1.2.3.順序條碼讀取完成設定

Please scan as follow as below 1.2.3. barcodes to complete the set.



The settings as below are the setting of scanner head, you can keep the connection between scanner and bluetooth device when you are setting.

以下掃描頭設定在藍牙連線狀態下也可以進行設定。

### 掃描頭待機省電機制 scanner Suspended for save power

請按照下列1.-3.順序條碼讀取完成設定

Please scan as follow as below 1.-3. barcodes to complete the set.



2. ※ ON 開啓



OFF 關閉



### 振動器開啓或是關閉 Turn On or Off the Vibration

請按照下列1.-3.順序條碼讀取完成設定

Please scan as follow as below 1.-3. barcodes to complete the set.



2. ※ ON 開啓



OFF 關閉

